

### Maintaining the product

The eCab needs proper maintenance to insure that it continues to work well for a long time. Please keep it in a clean environment such as a case. Regularly wipe off excess dirt on joints and outside surfaces of the eCab.

#### ■ Battery

Use a genuine JOYETECH charger and wall adapter to recharge the battery. Do not store battery in direct sunlight, excessive heat, near fire or in places with extreme cold or high humidity. Do not drop or puncture battery.

#### ■ Liquid

Storing liquids in an environment that is too hot or too cold may cause it to deteriorate. Liquids should be stored in a cool place away from direct sunlight. Do not freeze liquid. Do not drink liquid. If liquid gets into your mouth or on your skin, wipe area with a tissue and rinse clean.

#### ■ Atomizer kit

If you experience severe heat during product use, discontinue temporarily until it cools down. If the coil in the atomizer head is dry, you may experience burning taste. Please ensure there is enough liquid in the atomizer.

To remove burnt taste, clean or replace the atomizer.

#### ■ Tank cartridge

Tank cartridge is disposable and must be replaced periodically. If cleaning is required, start by first opening the inlet cap, rinse with fresh water, then wipe dry. Do not use teeth, knives, nail clippers, etc. to remove the tank cap. Doing so may lead to injury or damage the tank causing it to leak.



### Precautions and frequently asked questions

■ Do not bite down hard on the inlet portion of the Tank Cartridge as this may cause the small inlet cap section of the cartridge to become dislodged and present a choking hazard.

■ To function properly e-cigarettes require the mixing of liquid and air. This may sometimes cause liquid to build up within the atomizer cone and around the atomizer itself. This is normal, however it may lead to problems if it is not cleaned out. To prevent problems be sure to wipe away any excess liquid with a tissue or towel.

#### ■ Burning taste

ⓐ Inhale 2-3 times without pressing the LED button. This allows liquids into the atomizer chamber. Then use as you normally would by pressing the button while inhaling.

ⓑ Shake eCab back and forth a few times quickly. This helps get liquids back into the chamber. Then continue using as normal.

ⓒ It may also be necessary to remove any excess liquid build up within the atomizer cone after the above mentioned steps.

ⓓ If this does not resolve the issue then repeat the method again, clean the atomizer, or replace the atomizer head.

■ Battery should only be stored in temperatures between 32F to 104F ( 0C to 40C ). The eCab battery is a lithium-ion battery. Carefully read the manual for further battery safety tips and charging directions.

#### ■ Is there a risk of secondhand smoke?

Testing has shown very little to no nicotine present in exhaled vapor, we recommend never using in the presence of children or pregnant women.

■ Ensure the tank is fully inserted into the atomizer chamber. If there is a space between the cartridge and the atomizer, it may create abnormal air flow and could result in fluid leaks.

■ Refill the Tank cartridge before it is fully empty. When the liquid level goes below 10%, the remaining liquid may flow out and cause leaking.

This phenomenon is caused by the weakening of the fluid tension within the cartridge.

■ Can the e-liquid be mixed with water or any other liquid?

We recommend only using JOYETECH liquids in your eCab as other liquids or water may result in damage to the eCab unit.

#### ■ Can I use regular AAA batteries?

Regular AAA batteries may cause damage, please use only the dedicated JOYETECH batteries

■ Can a Rapid battery charger be used with the eCab batteries? Third party chargers may cause damage, fire, or explosion risk. Please use the dedicated JOYETECH battery charger only.

■ External shocks such as dropping an e-cigarette or repeated vigorous movements may cause leaking. Please keep your e-cigarette in a stable place.

### Warranty and Returns

Refer to the vendor you purchased this product from for their warranty and return policy. JOYETECH's warranty does not apply to products purchased through third party vendors.

### Warning

JOYETECH's products are intended for adults over the age of 18 or the legal smoking age depending on your State or country. Our products are not intended for children, pregnant women, women who may become pregnant, non-smokers or smokers seeking a smoking cessation product.

■ E-cigarettes are not smoking cessation devices and have not been approved as such. If you're seeking a smoking cessation method, please consult your healthcare providers or organizations that deal specifically with quitting smoking.

■ JOYETECH's products may contain nicotine, a highly addictive and poisonous substance and maybe dangerous to your health.

■ Do not use nicotine products if you are pregnant or breast-feeding. Nicotine is a chemical known to produce birth defects and reproductive harm.

■ Do not use nicotine products if you have any of the following medical conditions, but not limited to, heart disease, diabetes, high blood pressure or asthma.

■ JOYETECH's products have not been evaluated by the Food and Drug Administration nor is it intended to treat, prevent or cure any disease or condition.

■ If you experience any symptoms of nicotine poisoning which may include:

Vomiting, nausea, diarrhea, headache, difficulty breathing, sweating, palpitations, lisp, stomachache or pain, seizures and weakness, stop using the product immediately and consult your healthcare provider.

■ Nicotine based liquids may be toxic if orally ingested or in contact with skin. Keep out of reach of children and pets.

Nicotine based Liquids are toxic to the environment. Do not flush or pour liquids down the drain. Please dispose of containers properly.

Use product only as intended and only with liquids designed for e-cigarettes.

JOYETECH name and logo are trademarks of JOYETECH LLC. No unauthorized use permitted.

Copyright 2012



# eCab™

## USER MANUAL

www.joyetech.com

10

11

12

13

14

15

16

1

### This kit contains



- eCab Atomizer cone x 1\*
- eCab Atomizer head(Normal) x 2\*
- eCab Battery housing x 1 (body x 1 + cap x 1)
- eCab 360mAh rechargeable battery x 2
- Tank cartridge x 3
- eCab Battery charger
- USB adaptor
- Manual

\* Display is a component of the atomizer kit

### The New Standard, eCab™

The eCab is simpler and more convenient version of the existing Changeable System. It features a new battery housing with the ability to replace the rechargeable battery. The eCab is also designed to allow users to quickly check and change their atomizer.

The JOYETECH eCab battery enables over 150 standard puffs. Charging takes approximately 2 hours.

The unique changeable tank system uses refillable tanks that are more economical than traditional e-cigarettes. The eCab's thin design is light weight and comfortable to use.

To ensure the optimal performance and safety of your eCab, please read the entire manual for all instructions and precautions.

※ We reserve the right to change components and functions of the e-cigarette in order to improve the product without notice to consumers. Please visit our website for more up to date information at [www.joyetech.com](http://www.joyetech.com)



Patent Application No. 10-1125690  
Tank cartridge design, Registration No. 30-2012-17457

### Charging the battery

The eCab 3.7v 360mAh battery is a lithium-ion battery. It should be charged using the dedicated JOYETECH charger. Charge time is approximately 120 minutes (based on a fully discharged state).

To Charge the battery, place it into the charger insuring that the polarity is correct. Plug the power cord into an appropriate USB port that is designed for supplying sufficient power.

A red LED will illuminate to indicate charging. The LED will become green when charging has completed.



■ Use only the dedicated JOYETECH eCab battery. Do not use other batteries. This could lead to damage and malfunction.

- Use a dedicated high voltage USB port to charge battery properly when using a computer.
- A Lithium-ion battery is a consumable item. Usage time will gradually become shorter.
- Be sure to charge battery fully before first use.

### How to assemble your eCab

The eCab is composed of a rechargeable battery, battery housing, atomizer, atomizer cone, and tank cartridge.



To assemble, first Insert the battery (positive terminal first) into the battery housing. Attach the battery cap pushing in until it locks into place.




Insert the atomizer into the atomizer cone and screw the cone on to the battery housing in a clockwise direction. Excessive force may damage the product.

### How to add liquid to the tank cartridge



Insert the tip of the liquid bottle into the hole in the cap and fill. Insert the filled tank into the cone so that the plastic cap sits onto the spike of the atomizer. Do not overfill.

### How to replace the atomizer head

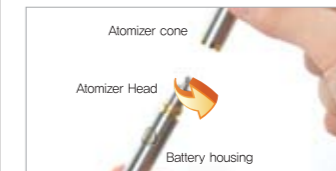

Remove the tank cartridge and unscrew the atomizer cone from the battery housing. The atomizer is located on top of the battery housing once the atomizer cone has been removed. The ease of access allows you to easily replace or clean the atomizer at this point.

### How to use the eCab

To use, simply inhale slowly while pressing the LED button on the battery housing. You will feel and taste the vapor gently moving into your mouth. Let the rich vapor collect in your mouth and enjoy the taste. Do not use short strong inhalations.

+ Ensure the eCab system is fully charged and assembled correctly. Refer to assembly instructions in this manual.  
+ The initial state of the battery setting is OFF.

Press the battery switch 5 times within 2 seconds to switch it to ON.  
+ Hold down the button as soon as you start to inhale. Release at the end of inhalation. If the button is held for too long it will shut off to prevent overheating. Please allow time to return to normal temperature if this occurs.

■ Battery power saving feature  
This product's battery has a power saving feature to avoid battery drain. To switch the battery OFF, press the LED button five times within two seconds. The LED button will flash a few times as the battery turns OFF. The e-cigarette will not function in this mode. To turn ON, press the LED button five times within two seconds.



■ Proper tank cartridge separation  
To separate the tank cartridge from the eCab, hold it with the battery pointing up towards the sky. Next slowly twist and pull the cartridge down and out of the atomizer chamber. This prevents accidental spilling of liquids if the cap is accidentally opened in the process.

※ Excessive use of this product may be harmful to health.

2

3

4

5

6

7

8

9